

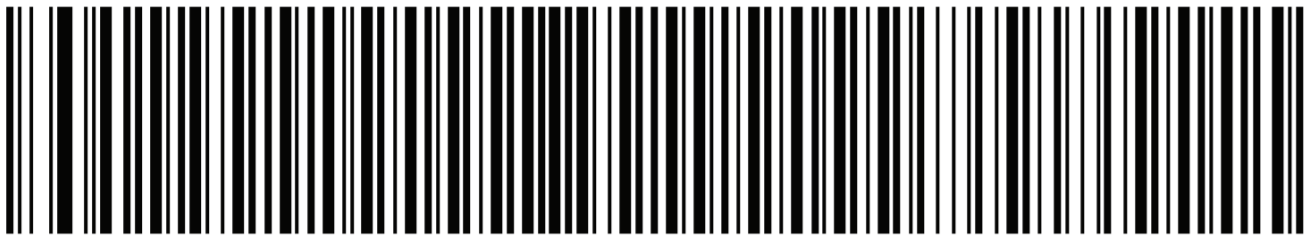
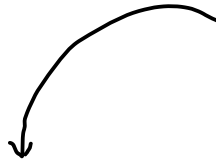



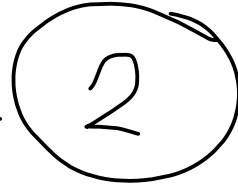


Set Factory Defaults

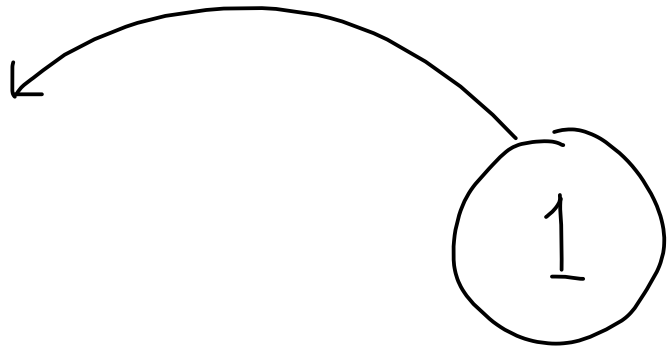

ADD AN ENTER KEY (CARRIAGE RETURN/LINE FEED)

OPTIONAL

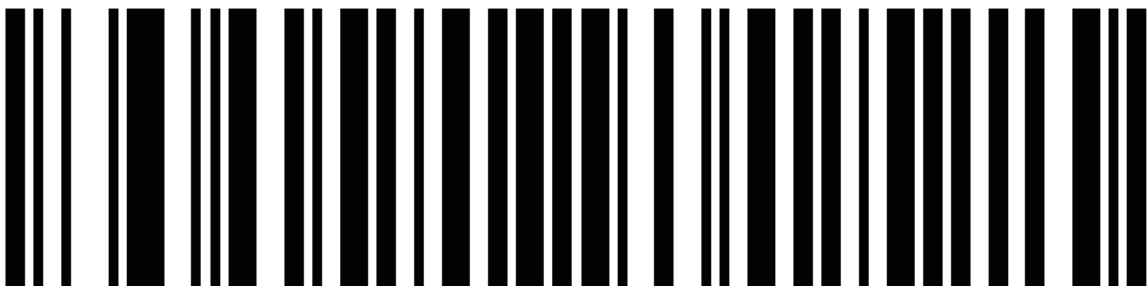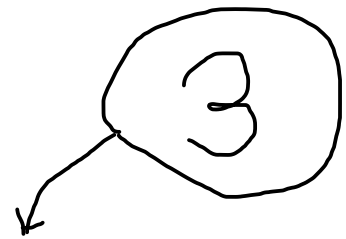

HID BT LE (Discoverable)



Pager Motor Disable
(0)



*** Pager Motor Enable**
(1)



Low Volume
(2)



Medium Volume
(1)



*** High Volume**
(0)



* **Disable Continuous Bar Code Read**
(0)



Enable Continuous Bar Code Read
(1)

Enable this to report only unique bar codes while the trigger is pressed. This option only applies when **Continuous Bar Code Read** is enabled.



Disable Continuous Bar Code Read Uniqueness
(0)



* **Enable Continuous Bar Code Read Uniqueness**
(1)